

INFINITY PRO 3.0

PREMIUM BAITBOAT

The world's top remote-controlled boats. Many years of work on this model make us convinced that it will meet the expectations of even the most demanding users and will work in all conditions. Using our ALL-IN-ONE boat is simply pure pleasure and quality guarantees complete trouble-free use.



INFINITY PRO 3.0

All the latest technical conveniences that we have been testing and improving for many years to be sure that our flagship model will satisfy even the most professional carp anglers around the world!

Failure-free, accurate, technologically advanced and precision of workmanship are just some of the features that can be attributed to our bait boats.

INFINITY PRO 3.0 is one of the few dedicated to the largest reservoirs even in the worst weather conditions, which it copes with without the slightest problem.

Amazing design, LED lights in frames and high-gloss varnishing have made our boat the most beautiful remote-controlled model in the world.

The All-IN-ONE controller is simply poetry.. Today you do not have to unfold several stands, turn on several devices, connect them to additional batteries. Our controller includes all the controls, GPS, echo sounders. And most importantly it is easy to use.

INCLUDED IN EACH BOAT:

Given that INFINITY PRO is a premium product, we couldn't miss accessories, which we add in the set, of course!

- Transport cover/backpack

t- Rigid cover for the controller - Remote control stand



FEATURES INFINITY PRO 3.0

COLOR SONAR PREMIUM

Water temperature detection: Displays real-time water temperature to help identify fish activity zones.

Our echosounder will professionally provide you with information about depth, bottom structure, substrate hardness, objects adjacent to the bottom and located in the depths. The accuracy of the color echosounder will also allow you to check the presence and size of aquatic vegetation and fish. We are the only ones on the market to offer such a large range not only for controlling the boat but also for reading the echosounder!

Terrain detection: Highly accurate color echosounder that perfectly reflects the structure and hardness of the bottom as well as the presence of aquatic plants.

Technical Specification:

Color: PIANO BLACK - HI-END

Dimensions: 75cm x 48cm x 30cm

Hull material: ABS TRIMARAN

Range: 500-900m

Batteries: 2x 25Ah LI-ION

Bait chamber capacity: Over. 6kg

Sonar: Transducer: Toslon / Ploter: Infinity Pro Sonar.

SERVICE: European distribution and service - Infinity Distribution - Express Service - Door-2-Door 14 days, We also provide full technical support! Attention! (each boat has our internal serial number) boats purchased outside our authorized stores or similar models from people importing them on their own from China are not entitled to service in Europe!



Entry:

In order to ensure the safety of the user and the product, please read the INFINITY PRO bait boat user manual carefully.

***We do not take responsibility for improper use of the product and if the product is modified or disassembled by yourself, damaging the warranty seals, in such a case the product is not subject to warranty repairs.**

HOW TO START:

1. Before using your bait boat, we recommend that you familiarize yourself with the basic controls at home. Please use the joystick to control the direction of the boat, check that the engine, bait hopper, lights and trigger hooks are working properly.

2. Before using, you will need to fully charge the batteries in the remote control and boat. The remote control is charged via a USB-C cable. When the remote control is fully charged, the light will change from red to green. You will also be able to see the battery level in the remote control on the screen.

3. The main batteries can be charged in the boat via adapters that connect the charger cables to the sockets at the back of the boat. Please tighten the charging ports on the hull correctly after charging is complete. Alternatively, the batteries can be removed from the boat and connected to an external charger. The LED on the charger will change from a small red light to green when the batteries are fully charged.

4. After installing the batteries in the boat, please tighten the cover screws securely to avoid flooding. To get the best signal, please install the antenna on the boat and point it upwards.

5. Turn on the remote control and then the boat. (follow this order)

6. Use the left joystick on the remote control to control the direction of the boat.

7. The right joystick controls the boat's drop flaps. Opening and closing is done by using the alternating joystick on the remote control. Move the joystick to the left to open the left flap, move it to the left again to close it. Repeat moving the joystick to the right for the right flap. There is an icon on the remote control that indicates whether the flap is closed or not. Additionally, a light flashes on the back of the boat to indicate the flap is moving.

8. Releasing the hook. This function is on the same joystick as the flaps with the open/close function. Move the joystick up or down.

9. Place the boat in the water and guide it to drop the set in the designated place or simply swim and scan the bottom.


10. Turn off the boat and then the remote control (keep this order) when turning it on reverse order.



WHAT? WHERE? AND HOW?

BOAT HULL:

1. Boat antenna
2. Grip
3. Rubber cap
4. Battery cover
5. Charging port
6. ON/OFF
7. Hook release system
8. Bait boat release flaps
9. LED lights
10. Service port
11. Rear LED lights (position)

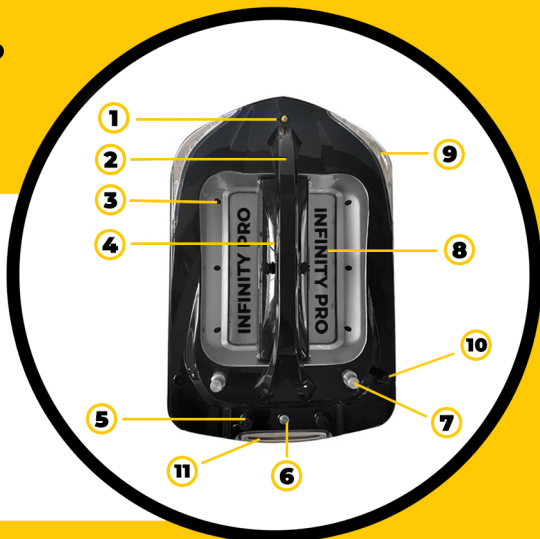

After unscrewing the cover, you will find a mounting shelf for batteries inside, where you connect the power and charging cables. Our system, unlike the competition, is based on many electronic components that are connected with cables, so if anything goes wrong, you only replace one element, not the entire electronics. This significantly reduces service costs in the future.



CONTROLLER:

1. Controller antenna
2. Sound notification light
3. Remote control joystick
4. Boat voltage
5. Information LEDs
6. Control joystick
7. Menu navigation arrows
8. Controller lighting
9. Controller on/off switch
10. Main menu
11. LED lights
12. Cells open status
13. Distance to point
14. Currently selected bank / GPS point
15. Number of connected satellites
16. Setting HOME point
17. Turning Sonar on/off
18. Return to HOME point
19. EXIT - exit menu and submenu
20. SAVE - save points
21. GO - sail to point
22. POINT - Select point
23. DEL - delete points
24. Joystick - Left/Right opening chambers
25. Joystick - Top/Bottom - trigger hooks.

CAMERA - VISION

1. Before using, please install the camera on the hull using the dedicated holder and connect the cable to the service port. Please fully charge the camera display and install it on the top of the controller.
2. Screw the antennas into the camera and display.
3. Turn on the “Other settings” menu in the “CAM” position - change the position from “-” to “+”
4. Turn on the camera display.
5. In the main view of the controller, clicking the “down arrow” starts the camera function. The right up/down joystick is responsible for lowering and raising the camera. When you want to exit, click “EXIT”
6. Night mode (infrared) turns on automatically in the event of insufficient lighting.
7. The display is factory-paired with the remote control.
8. The cable length is 30m. Visibility in good water transparency conditions is up to 25m.

BAIT SPREADER

1. Before using, please install the spreader on the hull using the dedicated holder. Connect it to the service port.
2. In the main view of the controller, select “up arrow” to activate.
3. The right joystick is used to turn the spreader on and off.
4. When finished, click “EXIT”
5. You can throw protein balls, pellets, grains and other baits into the spreader. Be careful that the bait is not too sticky to be able to spread it.
6. The spreader spreads baits in a radius of 10m.

“OTHER SETTINGS” MENU:

BASIC SETTINGS (“OK” button - next) (up/down arrows - change settings)

BRAKING TIME SETTING (ms): 1200

SW GOING: (if active, after 5 seconds of cruising, automatic or “II” button turns on (automatic boat forward cruise control.)

DISPLAY FISH WHILE GOING: (if active, the system shows the sonar reading even when cruising to points)

LEFT/RIGHT SWITCHING: (you can swap the joysticks to be able to steer with your other hand)

DISPLAY FISH: (if the sonar is active, it will show fish in addition to objects and hardness.

POLARITY: M1+ / M2- CAM +/- (depending on whether you want to turn on the camera)

MAX-SP: set from 5-100% boat power. (Default 100 unless we want to save batteries.)

COLOR SONAR:

1. The sonar automatically turns on when the boat is in manual mode, i.e. not controlled by the GPS function, to sail to a point or return to HOME. In "other settings" you can enable the sonar to be displayed while sailing.
2. There are four sensitivity settings, available via the menu options. Sensitivity 1 - will show all fish sizes / Sensitivity 10 - will show only large objects.
3. The system automatically scales according to the water depth, the maximum is 30m. The screen shows the current depth under the boat at that moment.
4. Marked fish are shown with their depths next to them.
5. You can also press the "PAUSE" button to allow the screen to be paused and the details observed.

GPS:

1. Setting the home point. After placing the boat in the water, this is the first step to setting the HOME point. After finding at least 4 satellites on the remote control, press and hold (2-3sec) the HOME button on the remote control. The remote control will beep and the screen will display that the distance to HOME is 0m. This means that the HOME point has been saved successfully.
2. SAVE A POINT - When the boat reaches a location that you want to set as a destination. Press the "SAVE" and "OK" buttons to save the point or overwrite a point that was already used.
3. To go to a saved point. Press "POINT" and "GO" or use only the "POINT" button and then the up/down arrow buttons to select another desired point from the 30 basic destinations in this point bank, then press "GO".
4. Deleting a saved point. Press DEL. The current point will be highlighted. To delete, press OK or select another point using the up/down buttons.

AUTO HOME

1. It is important to set the HOME point. (The HOME point should be near the shore). When the GPS loses signal or the controller is turned off, the boat can return to the HOME point by itself.
2. Press the "HOME WITH DOWN ARROW" button, the boat will return home by itself. Note: We strongly recommend that the HOME point be set as soon as possible after starting fishing. In case the remote control loses connection with the boat after some time, the boat will automatically return home.
3. If we have not set the home point and the boat loses range, the FAILSAFE mode is activated, i.e. the boat starts to make larger and larger circles to find range.
4. Please control the route of the boat on the way back to the shore. After finishing and pulling the boat to the shore, first turn off the switch on the boat, and then turn off the remote control. Turn on in the reverse order.
5. When using the boat, please pay attention to the boat lights. When the battery is low, all the boat lights will flash. Please return to shore immediately and charge your battery.
6. When operating your boat in the evening, please turn on your LED lights.

SERVICE:

- 1. Before sending the boat for service, please fill out the service request form and read the current service rules available at www.infinityboat.pl. We will inform you by e-mail about the next steps.**
- 2. In the event of a warranty failure, we collect the equipment from the customer using our courier. The customer should secure the bait boat in the original factory box or restore its level of protection, i.e. the boat packed in a transport backpack + thick cardboard + filling (styrofoam/other protective material) on each side of the boat + reinforcements from pieces of cardboard.**
- 3. In the event that the boat is sent in a backpack without any protection, the customer immediately loses the warranty on the equipment regardless of damage. We are not responsible for damage in transport if the boat was improperly secured.**
- 4. In most cases, the service operates in a 14-day door-to-door formula. Apart from random situations.**
- 5. We suggest that the boat be delivered after 24 months for a full post-warranty service. (paid)**
- 6. You can get additional information by phone and email. - Current contact details are always at www.infinityboat.pl**
- 7. If you also want to make sure that everything is OK with the boat in the case of very frequent use, there is also the possibility of a paid additional service after 12 months.**
- 8. The customer is obliged to deliver the boat cleaned. In the case of significant dirt, we will charge an additional fee for cleaning the boat. according to the service price list.**
- 9. The boat delivered to us personally for service must be collected personally. (please contact us before the boat is delivered)**
- 10. Each boat has seals and a nameplate with the serial number inside. We have a full database of where it was purchased.**
- 11. Boats from any other distribution or similar ones bought directly from China do not have any right to service throughout Europe. OUR SERVICE IS LOCATED IN KATOWICE - HERE WE SERVICE ALL BOATS FROM ALL OVER EUROPE.**

DISCLAIMERS:

- 1. The boat should be launched only after all hull bolts have been tightened. The user should also check that all seals are present on the bolts closing the dome above the batteries.**
- 2. The pilot should not have any contact with water. If it is discovered that the remote control has been flooded, only a paid service applies.**
- 3. After each completed longer session, the user should: - fully charge the batteries - unscrew the neck and battery cover above the batteries - disconnect and remove the batteries - check for any traces of water inside by turning it upside down. - leave the boat open to evaporate steam that may be created by condensation. Any signals related to incorrect operation of the boat and traces of water should be reported immediately and the boat should not be used, but opened and left to dry.**
- 4. In the event of independent interference and breaking the warranty seals - complaints will not be taken into account.**
- 5. Using batteries other than the original ones - will result in loss of the possibility of complaint.**
- 6. Any changes inside and outside the boat will result in loss of warranty.**
- 7. Charging the batteries with chargers other than the original ones - will result in loss of warranty.**
- 8. Any mechanical damage to the hull - will void the warranty.**
- 9. The boat cannot be turned on without connecting the antennas in the remote control and the boat.**
- 10. The boat cannot be turned on if the remote control has not been turned on.**
- 11. The user should use the transport backpack with full caution, despite the fact that they are additionally reinforced, we always transport it as close to the ground as possible or we exercise caution when putting on the backpack arms so that in the event of one of the arms breaking off, the boat is secured by the other arm.**

If you have any doubts or questions, please consult the service first.

WWW.INFINITYBOAT.PL



THE MANUAL CONTAINS ONLY BASIC INSTRUCTIONS FOR USING THE MODEL. WE INVITE YOU TO OUR YOUTUBE CHANNEL WHERE YOU WILL FIND LOTS OF VIDEOS THAT WILL HELP YOU USE OUR BAIT BOATS EVEN BETTER! THE VIDEOS ARE ALSO ON OUR WEBSITE.